


Input Specifications	
<b>Inputs per Module</b>	8
<b>Rated Voltage</b>	100–240 VAC
<b>Operating Voltage Range</b>	80–288 VAC
<b>AC Frequency</b>	47–63 Hz
<b>Input Current</b>	7mA @ 100VAC (50Hz) 8.5 mA @ 100VAC (60Hz) 14.2 mA @ 240VAC (50Hz) 17mA @ 240VAC (60Hz)
<b>Maximum Input Current @ Temp</b>	26mA @ 60°C (288VAC)
<b>Input Impedance</b>	15kΩ (50Hz), 12kΩ (60Hz)
<b>ON Voltage Level</b>	> 70VAC
<b>OFF Voltage Level</b>	< 20VAC
<b>Minimum ON Current</b>	5mA
<b>Maximum OFF Current</b>	2mA
<b>OFF to ON Response</b>	< 10ms
<b>ON to OFF Response</b>	< 25ms
<b>Status Indicators</b>	Logic Side (8 points)
<b>Commons per module*</b>	2 Isolated (4 points/common) @ 120VAC 2 Non-Isolated @ 240VAC

\*C1 and C2 must be jumped together by an external wire during 240VAC applications.

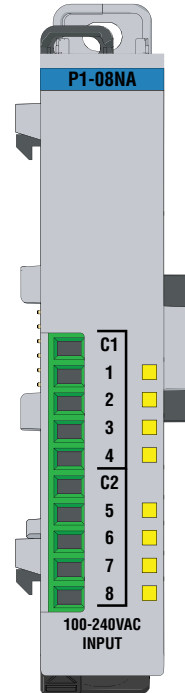

## P1-08NA AC Input


The P1-08NA AC Input Module provides eight 100–240 VAC inputs for use with the Productivity1000 system.

Input Specifications . . . . .	1
Module Installation . . . . .	2
QR Code . . . . .	2
Wiring Options . . . . .	3
Schematic & Wiring Diagram . . . . .	3
General Specifications . . . . .	4
Terminal Block Specifications . . . . .	4
Warning . . . . .	4

**Terminal Block sold separately, (see wiring options on page 3).**  
 Warranty: Thirty-day money-back guarantee. Two-year limited replacement (See [www.productivity1000.com](http://www.productivity1000.com) for details).


**WARNING:** Do not add or remove modules with field power applied.

**Step One:** With latch in "locked" position, align connectors on the side of each module and stack by pressing together. Click indicates lock is engaged.


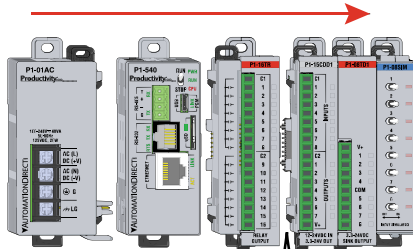


**Step Two:** Attach field wiring using the removable terminal block or ZIPLink wiring system.

Check all latches are secure after modules are connected.

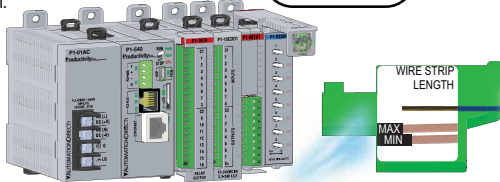

**Step Three:** To unstack modules, pull locking latch up into the unlocked position and then pull modules apart.

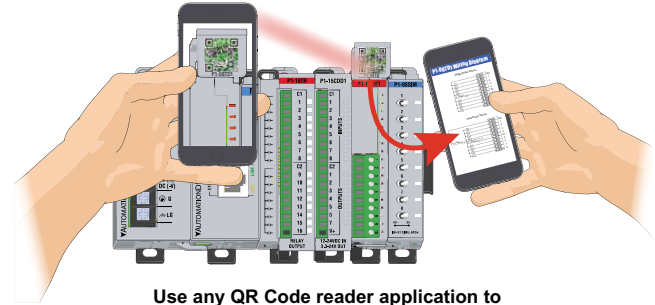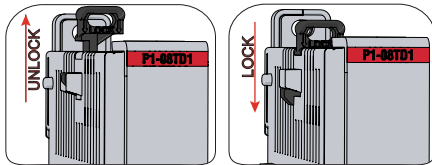


Use any QR Code reader application to display the module's product insert.

# P1-08NA Schematic

## Wiring Options

### 1 ZIPLink Feed Through Modules and Cables<sup>1</sup>

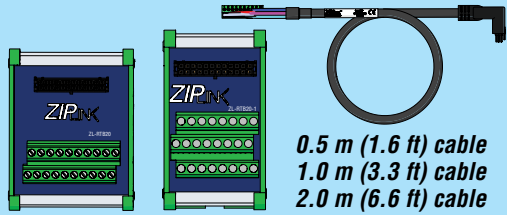


**ZIPLINK**  
AUTOMATIONDIRECT

ZL-RTB20  
ZL-RTB20-1


ZL-P1-CBL10  
ZL-P1-CBL10-1  
ZL-P1-CBL10-2

### 2 Terminal Block with pigtail cable

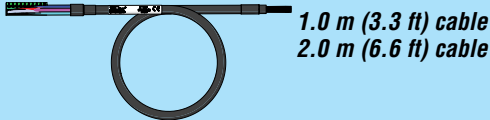


ZL-P1-CBL10-1P  
ZL-P1-CBL10-2P

### 3 Screw Terminal Block only

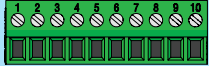

P1-10RTB  
(Quantity 1)

### 4 Spring Clamp Terminal Block only

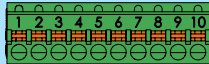

P1-10RTB-1  
(Quantity 1)


### 5 Accessories<sup>2</sup>




ZL-RTB-COM

TW-SD-SL-1


TW-SD-MSL-2

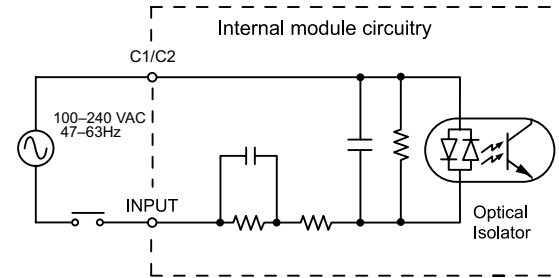

100-134 VAC  
47-63 Hz

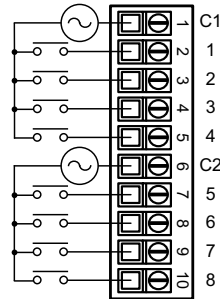

135-240 VAC  
47-63 Hz

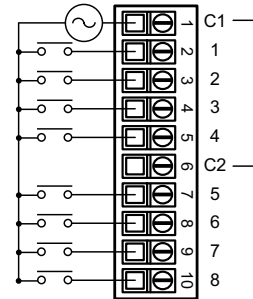

C1 and C2 must be linked externally for this voltage range

1. Cable + ZIPLink Module = Complete System

2. ZL-RTB-COM provides a common connection point for power or ground

**WARNING:** To minimize the risk of potential safety problems, you should follow all applicable local and national codes that regulate the installation and operation of your equipment. These codes vary from area to area and it is your responsibility to determine which codes should be followed, and to verify that the equipment, installation, and operation are in compliance with the latest revision of these codes.

**Equipment damage or serious injury to personnel can result from the failure to follow all applicable codes and standards. We do not guarantee the products described in this publication are suitable for your particular application, nor do we assume any responsibility for your product design, installation, or operation.**

If you have any questions concerning the installation or operation of this equipment, or if you need additional information, please call Technical Support at .

This publication is based on information that was available at the time it was printed. At AutomationDirect.com® we constantly strive to improve our products and services, so we reserve the right to make changes to the products and/or publications at any time without notice and without any obligation. This publication may also discuss features that may not be available in certain revisions of the product.

### Terminal Block Specifications

Part Number	P1-10RTB	P1-10RTB-1
<b>Positions</b>	10 Screw Terminals	10 Spring Clamp Terminals
<b>Wire Range</b>	30–16 AWG (0.051–1.31 mm <sup>2</sup> ) Solid / Stranded Conductor 3/64 in (1.2 mm) Insulation Max. 1/4 in (6–7 mm) Strip Length	28–16 AWG (0.081–1.31 mm <sup>2</sup> ) Solid / Stranded Conductor 3/64 in (1.2 mm) Insulation Max. 19/64 in (7–8 mm) Strip Length
<b>Conductors</b>	*USE COPPER CONDUCTORS, 75°C* or equivalent.	
<b>Screw Driver</b>	0.1 in (2.5 mm) Maximum*	
<b>Screw Size</b>	M2	N/A
<b>Screw Torque</b>	2.5 lb-in (0.28 N-m)	N/A

\*Recommended Screw Driver TW-SD-MSL-1

### General Specifications

<b>Operating Temperature</b>	0° to 60°C (32° to 140°F)
<b>Storage Temperature</b>	-20° to 70°C (-4° to 158°F)
<b>Humidity</b>	5 to 95% (non-condensing)
<b>Environmental Air</b>	No corrosive gases permitted
<b>Vibration</b>	IEC60068-2-6 (Test Fc)
<b>Shock</b>	IEC60068-2-27 (Test Ea)
<b>Field to Logic Side Isolation</b>	1800VAC applied for 1 second
<b>Insulation Resistance</b>	> 10MΩ @ 500VDC
<b>Heat Dissipation</b>	1800mW
<b>Enclosure Type</b>	Open Equipment
<b>Module Location</b>	Any I/O position in a Productivity1000 System
<b>Field Wiring</b>	Removable terminal block. Use <b>ZIPLink</b> Wiring System optional (sold separately) See "Wiring Options" on page 3.
<b>EU Directive</b>	See the "EU Directive" topic in the Productivity Suite Help File. Information can also be obtained at: <a href="http://www.productivity1000.com">www.productivity1000.com</a>
<b>Terminal Type (sold separately)</b>	10-position Removable Terminal Block
<b>Weight</b>	70g (2.5 oz)
<b>Agency Approvals</b>	UL61010-2-201 file E139594, Canada & USA CE (EN61131-2 EMC and EN61010-2-201 Safety)*

\*See CE Declaration of Conformance for details.

Document Name	Edition/Revision	Date
P1-08NA-DS	1st Edition	5/18/2018

Copyright 2018, AutomationDirect.com Incorporated/All Rights Reserved Worldwide