← FLOWLINE EchoPod/EchoTouch® Reflective Technology™ Ultrasonic Liquid Level Sensors



Overview

The innovative EchoPod/EchoTouch Reflective Techonolay ultrasonic liquid level sensors replace other ultrasonic level sensors in condensation applications, as well as float, conductance and pressure sensors that fail due to contact with dirty, sticky and scaling media in small, medium and large capacity tanks. Applied in chemical, water and wastewater applications, these general purpose or intrinsically safe non-contact sensors are available with single and multi-function capabilities, including continuous level measurement, switching and control. The standard 4-20 mA output is easily monitored by a PLC or other controller. Models with four relays can be configured for level alarms and/or standalone level control such as automatic fill or empty functions using the embedded level controller. PC configuration of all models is simple with WebCal[™] software, while the UG06, UG12 and US06 models also offer limited configuration via their pushbuttons and integral display.

What is Reflective Technology™?

Condensation is the most commonly encountered variable in liquid level applications. Condensation attenuates the acoustic signal of ultrasonic sensors that have a flat horizontal transducer face, weakening their signal strength and signal-to-noise ratio by up to 50%, and substantially reducing their measurement reliability. At the core of Reflective Technology™ is a simple fact: unlike flat horizontal surfaces, significant water droplets cannot adhere to smooth vertical surfaces. By orienting the internal ultrasonic transducer vertically, condensation runs off the transducer face and does not affect sensor performance. The unimpeded transmit and receive signals are redirected to and from the liquid off a 45° reflector, delivering reliable level measurement. Thanks gravity!








WebCal Software

WebCal PC software is a utility program that enables users to easily configure their EchoSonic II, EchoTouch and EchoPod level transmitters, switches, and controllers. Download your free copy of WebCal at and connect \Box sensor through our


Fob USB adapter (L199-2001). Develop your configuration using pre-programmed function menus as the tank graphic and set point fields automatically change to match your configuration. Then, input your level set point values and click the Write to Unit button. Your configuration will be downloaded into the sensor and verified in less than a second. Last, click the Wiring Diagram button to open a wiring schematic of your configuration in PDF format. Print the document, disconnect the sensor and wire it per the schematic. As new software or firmware becomes available, it can be downloaded and updated through WebCal.





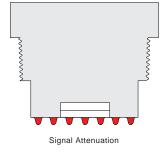



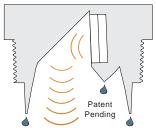

Reliable Measurement

Level Sensors

tULS-1





L199-2001



REFLECTIVE

ECHNOLOG

FLOWLINE EchoPod/EchoTouch® Reflective **Technology™ Ultrasonic Liquid Level Sensors**

EchoPod/EchoTouch Reflective Technology Ultrasonic Liquid Level Sensors General Specifications								
Model	UG01-0001-40	UG03-0001-40	UG06-0001-00	UG12-0001-00	US01-0001-00	US03-0001-00	US06-0001-00	
Price								
Туре	EchoPod/EchoTouch Reflective Technology (works in condensing environments)							
Classification	General purpose (non-hazardous)				Intrinsically safe			
Media	Liquids							
Range	1.5 in to 4.9 ft (3.8 cm to 1.5 m)	4in to 9.8 ft (10.1 cm to 3m)	8in to 19.6 ft (20cm to 6m)	18in to 39.3 ft (45.7 cm to 12m)	1.5 in to 4.9 ft (3.8 cm to 1.5 m)	4in to 9.8 ft (10.1 cm to 3m)	8in to 19.6 ft (20cm to 6m)	
Output	4-20 mA and (4	4) SPST relays			4-20 mA (No Relays)			
Mounting	Vertic	al, top of tank, 2in NPT	male	Vertical, top of tank, 3in NPT male	Vertical, top of tank, 2in NPT male			
Electrical Termination	Integral 48in, 9-conductor, shielded cable		Screwless terminals, 1/2in female NPT		Integral 48in, 4-conductor, shielded cable		Screwless terminals, 1/2in female NPT	
Configuration	WebCal Software (free download) and Ll99-2001 Fob USB Adapter (purchased separately)		WebCal Software (free download) and LI99-2001 Fob USB Adapter (purchased separately) or Pushbutton / LCD		WebCal Software (free download) and Ll99-2001 Fob USB Adapter (purchased separately)		WebCal Software (free download) and LI99-2001 Fob USB Adapter (purchased separately) or Pushbutton / LCD	
Ambient Temperature	-31° to 140°F (-35° to 60°C)				-40° to 176°F (-40° to 80°C)			
Process Temperature	-40° to 176°F (-40° to 80°C)							
Pressure	30 PSI (2 bar) max.							

EchoPod[®] UG06 & UG12 Series





Part No. UG06-0001-00 Shown

Part No. UG12-0001-00 Shown

UG06 & UG	12 Technical Sp	ecifications		
Model	UG06-0001-00	UG12-0001-00		
Price				
Weight (lbs)	1.9	2.5		
Range	8in to 19.6 ft (20cm to 6m)	18in to 39.3 ft (45.7 cm to 12m)		
Accuracy	±0.2% of range			
Resolution	0.079 in (2mm)	0.196 in (5mm)		
Sensing Dead Band*	8in (20.3 cm)	18in (45.7 cm)		
Beam Width	3in (7.6 cm)	6in (15.2 cm)		
Configuration**	Pushbutton or WebCal® PC Windows® USB® 2.0			
Memory	Non-volatile			
Display Type	LCD, 6-digit			
Display Units	Inch, cm or percent			
Supply Voltage	14-28 VDC			
Max. Consumption	0.5 W			
Loop Resistance	500Ω @ 24VDC			
Signal Output	4-20 mA, two-wire			
Signal Invert	4-20 mA or 20-4 mA			
Signal Fail-Safe	4mA, 20mA, 21mA, 22mA, hold last			
Process Temperature	-40° to 176°F (-40° to 80°C)			
Temp. Compensation	Automatic			
Ambient Temperature	-31° to 140°F (-35° to 60°C)			
Pressure	30 PSI (2 bar)			
Enclosure Rating	Type 6P (IP68)			
Enclosure Material	Polypropylene (PP)			
Enclosure Cap Material	Clear Polycarbonate (PC)			
Enclosure Vent	Water tight membrane			
Conduit Entrance	1/2 in NPT			
Transducer Type	Reflective			
Transducer Material	Polyvinylidene flouride (PVDF)			
Process Mount	2in Male NPT	3in Male NPT		
Classification	General purpose			
Compliance	CSA certified to UL 61010-1			
Agency Approvals	CSA, CE			

* Dead band is the minimum distance the sensor must be mounted above the max liquid level.

** Some configuration options, such as volumetric mode, only available through Web-Cal. See manual for more configuration options.

Overview

The EchoPod UG06 and UG12 general-purpose reflective ultrasonic level transmitters provide continuous level measurement up to 39.3' (12m) with a 4-20 mA analog signal output, and is configured via WebCal software with limited configuration also available via the integral pushbutton display module. The non-contact liquid level sensor features Flowline's proprietary Reflective Technology™ that delivers reliable level measurement in condensing environments. Select this sensor for bulk tanks with non-foaming and mildly vaporous media such as chemicals, water, wastewater and oil. Typical applications include bulk storage, neutralization tank, clarifier and waste sumps.

Features

- 6m (19.6') and 12m (39.3')measurement ranges
- Reflective Technology[™] measures reliably with condensation
- Corrosion resistant PVDF transducer with IP68 PP enclosure
- Fail-safe diagnostics with selectable signal fail-safe outputs
- LCD display indicates level in inches, feet, or meters
- Narrow 3" (7.6cm) (UG06) or 6" (15.2cm) (UG12) beam width for applications with limited space
- Windowed enclosure cap provides liquid tight level indication
- Configuration via WebCal software with limited configuration via the integral pushbutton and display
- Automatic temperature compensation from -40° to 176°F (-40° to 80°C)
- Made in the USA


Agency Approvals

• CSA, CE



Configuration

The settings for the UG06 and UG12 are configured with free WebCal software (downloadable from AutomationDirect Web site), and an LI99-2001 Fob USB adapter (purchased separately).

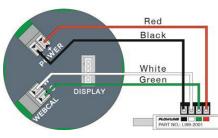



Note: Remove the display from the housing and disconnect the cable from the connector before wiring the Fob.

See the end of the Ultrasonic Level Sensor Section for further details and Accessories



Ultrasonic Liquid Level Sensor Accessories

Ultrasonic Liquid Level Sensor Accessories						
Part No.	Item Photo	Description	Quantity	Weight	Price	
LI40-1001		Flowline PodView general purpose digital indicator, displays tank level or volume and sensor relay status, 6-digit LCD display with four relay status indicators, 3-button user interface, polycarbonate panel mount enclosure with NEMA 4 (IP65) faceplate, 6-foot (1.8-meter) 22AWG 4-conductor cable, for use with Flowline EchoPod DL, DS and DX series ultrasonic level sensor with firmware V50.0 or later	1	0.6		
LM50-1001		Flowline side mount bracket, 2 inch NPT female threads, polypropylene (PP), for use with Flowline DL34, LU23, LU28, LU29, LU74, LU78, LU81, LU83, LU84, UG01, UG03, UG06, US01, US03 and US06 series ultrasonic level sensors	1	0.4		
LM50-1001-1		Flowline side mount bracket, 2 inch NPT female threads, polypropylene (PP), and 2 inch NPT male x 1 inch NPT female reducer bushing (PVC), for use with Flowline DL14, DL24, DS14, DL10, DX10, LU27, LU77 and LU80 series ultrasonic level sensors	1	0.6		
LM52-1400	9	Flowline reducer bushing, 2 inch NPT male x 1 inch NPT female threads, PVC, for use with Flowline DL14, DL24, DS14, DL10, DX10, LU27, LU77 and LU80 series ultrasonic level sensors	1	0.2		
LM52-2400	9	Flowline reducer bushing, 3 inch NPT male x 2 inch NPT female threads, PVC, for use with Flowline DL34, LU23, LU28, LU29, LU74, LU78, LU81, LU83, LU84, UG01, UG03, UG06, US01, US03 and US06 series ultrasonic level sensors	1	0.6		
LM52-3800	9	Flowline reducer bushing, PVC, 4in male NPT to 2in female NPT. For use with Flowline DL34, LU23, LU28, LU29, LU74, LU78, LU81, LU83, LU84, UG01, UG03, UG06, US01, US03 and US06 series ultrasonic level sensors	1	2.0		
LM52-1890		Flowline low-profile bulkhead fitting, 1 inch NPT female x slip socket, with mounting nut, PVC, for use with Flowline DL14, DL24, DS14, DL10, DX10, LU27, LU77 and LU80 series ultrasonic level sensors	1	0.5		
LM52-2890		Flowline low-profile bulkhead fitting, 2 inch NPT female x slip socket, with mounting nut, PVC, for use with Flowline DL34, LU23, LU28, LU29, LU74, LU78, LU81, LU83, LU84, UG01, UG03, UG06, US01, US03 and US06 series ultrasonic level sensors	1	1.2		
LM52-3890		Flowline low-profile bulkhead fitting, PVC, 3in female NPT to slip socket. For use with Flowline UG12 series ultrasonic level sensors. Mounting hardware included.	1	2.1		
LM52-1850	.	Flowline mounting flange, 1 inch NPT female threads, CPVC, for use with Flowline DL14, DL24, DS14, DL10, DX10, LU27, LU77 and LU80 series ultrasonic level sensors	1	0.5		
LM52-2850		Flowline mounting flange, 2 inch NPT female threads, CPVC, for use with Flowline DL34, LU23, LU28, LU29, LU74, LU78, LU81, LU83, LU84, UG01, UG03, UG06, US01, US03 and US06 series ultrasonic level sensors	1	1.0		
LM52-3850		Flowline mounting flange, CPVC, 3in female NPT. For use with Flowline UG12 series ultrasonic level sensors.	1	1.9		
204038	0	Replacement mounting gasket, for use with Flowline DL14, DL10, DX10 and DS14 series ultrasonic level sensors	1	0.1		
200128	0	Replacement mounting gasket, for use with Flowline DL24, LU27, LU77 and LU80 series ultrasonic level sensors	1	0.1		
200129	Ο	Replacement mounting gasket, for use with Flowline DL34, LU23, LU28, LU29, LU74, LU78, LU81, LU83 and LU84 series ultrasonic level sensors	1	0.1		


When installing the 1" NPT level sensors care should be used to mechanically isolate the sensor housing from the tank. This can easily be done by using any of the Flowline mounting accessories which are designed to provide the isolation needed.




Ultrasonic Liquid Level Sensor Accessories

Dimensions


inches [mm]

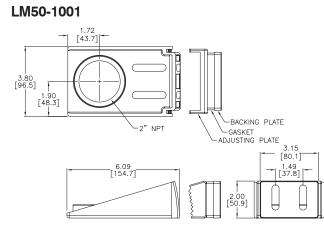


LM50-1001-1

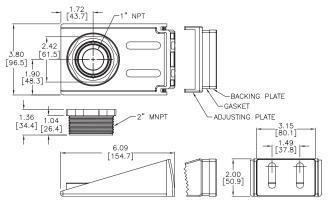


LM52-1400

 


 


LM52-2400

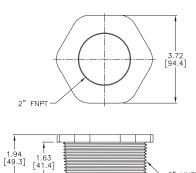



LM52-3800

 

 


LM52-1890

 


 

LM52-2890

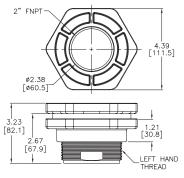

LM52-3890

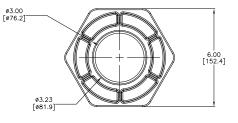



See our website

____ for complete Engineering drawings.




Ultrasonic Liquid Level Sensor Accessories


Dimensions


inches [mm]

LM52-1850

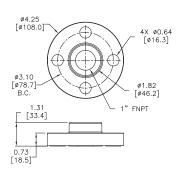


LM52-2850

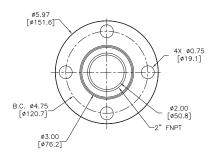

 

LM52-3850

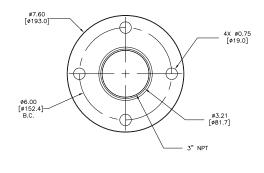



See our website

for complete Engineering drawings.



WebCal Ultrasonic Level Sensor Software and USB Fob Adapter

Overview

WebCal PC software is a utility program that allows users to easily configure their EchoPod, EchoTouch and EchoSonic II level transmitters, switches, and controllers. Download your free copy

sensor through the Fob USB adapter (LI99-2001). Develop your configuration using pre-programmed function menus as the tank graphic and set point fields automatically change to match your configuration. Then, input your level set point values and click the Write to Unit button. Your configuration will be downloaded into the sensor and verified in less than a second. Last, click the Wiring Diagram button to open a wiring schematic of your configuration in PDF format. Print the document, disconnect the sensor and wire it per the schematic. It's that simple.


Configuration files can be named, saved, emailed, printed, opened and used again under revision control. The advanced feature page enables you to change the measurement signal, output filtering and invert relay states from N.O. to N.C. As new software or firmware becomes available, they can be downloaded and updated through WebCal.

Features


- 169 configurations with pull-down menu selections
- Graphical interface lets you visualize your configuration
- Applicable level set point fields appear automatically
- Installs and tests configuration in less than a second
- Available PDF wiring diagram for each configuration
- Technical help menu with FAQs, tips and glossary
- Rapidly program sensors to the same configuration
- Save configuration files for future use or reference
- Print wiring diagrams and configuration text files
- Email configuration files to other remote users
- Made in the USA
- Please check for the most recent system requirments.

WebCal Ultrasonic Level Sensor Software and USB Adapter						
Part No.	Item Photo	Description	Quantity	Weight (lbs)	Price	
L199-2001	10 M	Flowline Fob USB adapter, required for use with WebCal software to configure Flowline EchoPod, EchoTouch and EchoSonic II ultrasonic level sensors.	1	0.1		
WEBCAL		Configuration software CD for Flowline EchoPod, EchoTouch and EchoSonic II ultrasonic level sensors (also available as a free download from the AutomationDirect Web site). Requires an LI99-2001 Fob USB adapter (purchased separately).	1	0.1		

EchoPod Configuration

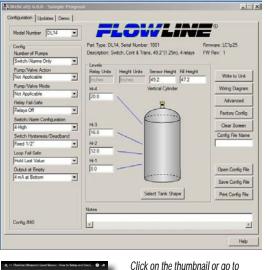

EchoSonic II Configuration

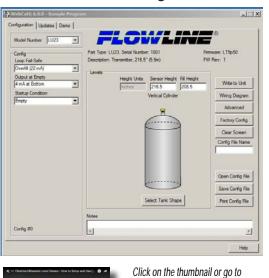

Lini

Setup And Operation Of Flowline Ultrasonic Sensors, Part 2 of 2

AUTOMATIONDIRECTI



Click on the thumbnail or go to https:///VID-LE-0004 for Part 1 of our How To video

<u>LE-0004</u> for Part 1 of our How To vide on the use of the Flowline Ultrasonic Level Sensors https://VID-LE-0005 for Part 2 of our How To video on the use of the Flowline Ultrasonic Level Sensors