


MDM-TEL Industrial Modem

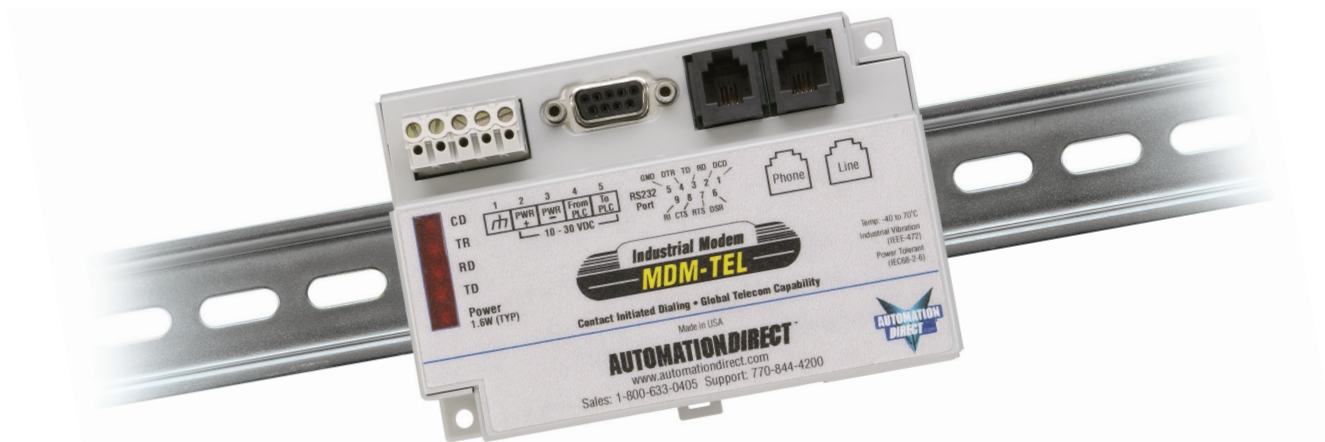

Reduce design time

The MDM-TEL industrial serial modem has the features to meet your application requirements in a straight-forward manner. You won't need to concoct a way to make it work. The MDM-TEL uses an industrial version of the standard PC modem chip set, so it supports the full set of AT commands and features. The MDM-TEL complies with analog telephone systems around the world. Whether you have domestic or international customers, the MDM-TEL can go where your equipment goes. Required to use a specific PLC? No problem. The MDM-TEL is compatible with most brands. And with the MDM-TEL, you can avoid repeating the design and qualification process.

Simplify installation

Download the Windows-based Configuration Wizard for easy set-up. The MDM-TEL comes ready for either DIN-rail or panel mounting. Requiring only 1.6W of 24 VDC power, the MDM-TEL is perfect for control panels and remote locations without the need for a 110 VAC source.

Industrial grade


The MDM-TEL has been designed for the industrial environment. It will survive extreme temperatures, as well as dirty and unreliable industrial power. Meeting UL Haz Loc (Class I Div. 2) and the IEC68-2 standard for vibration resilience, the MDM-TEL will provide years of reliable performance in applications where other modems just shouldn't go.

Features:

- Requires Analog phoneline
- Contact-initiated by dialing a PLC or other device
- Works with most PLCs (Null Modem adapter included)
- Auto answer capability
- Global Telecom capability
- DC-powered (no external transformer needed)
- Offers choice of DIN rail or panel mounting
- UL 508 (PLC enclosure), UL Haz Loc Class I, Div. 2, CSA,
- Rated -30°C to +70°C
- Downloadable Windows setup software
- No DIP switches or jumpers
- Includes RS-232 (DB9) modem configuration cable

MDM-TEL


PLC can actuate dial out ...

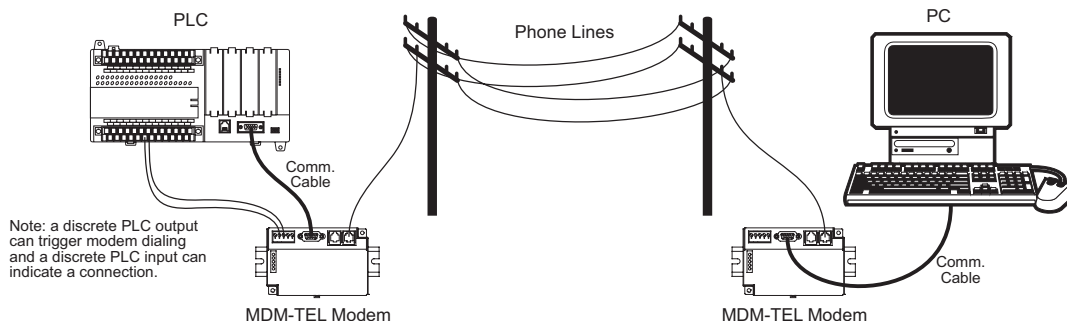

MDM-TEL Specifications

MDM-TEL Performance Specifications	
Telephone Line	
Max. Data rate	33.6 kbps (V.34)
Compatibility	V.34, V32bis, V.32, V.22, V.22A/B, V.23, V.21, Bell 212A and 103
Data compression	V.42 bis MNP5
Error correction	V.42 MNP 2-4
Ringer equivalent	0.3
Line/phone jack	RJ11
RS232 Port	
Max. RS232 rate	115.2 kbps (Kilobaud)
RS232 (DB9 female)	TXD, RXD, CTS, RTS, DCD, DTR, DSR, RI, GND
Command set	All standard AT and S register commands, incl. Class 1 & 2 Fax
Status LEDs	
CD (carrier detect)	Carrier detected on the phone line
TR (terminal ready)	Host connected and ready
RD (receive data)	Data is received from the phone line
TD (transmit data)	Data being sent out the phone line
Power	On when power is present
General Characteristics	
Input power	10-30 VDC
Input current	65 mA @ 24 VDC
Operating temperature	-30°C to 70°C (-40°C to 85°C storage)
Humidity	5% to 95% RH (non-condensing)
Flammability	UL 94V-0 materials
Telecom certification	FCC, Industry Canada CS03-8, ACA TS 001-1997; ACA TS 002-1997
Electrical safety	UL 508, CSA C22. 2/14; EN61010-1 (IEC1010), IEC 950: 1991, AS/NZS3260-1993
EMI emissions	FCC part15, ICES-003, Class A; EN55022; AS/NZS3548-1995
EMC immunity	EN50082-1 (IEC801-2, 3, 4)
Surge withstand	IEEE-472 (ANSI C37.90)
Vibration	IEC68-2-6
Hazardous locations	UL (file #E200031), CSA C22.2/213-M1987, Class 1, Div 2, Groups A,B,C,D), Cenelec EN50021 (EEx nA II T4)
Mounting	DIN rail or panel mount
PLC Discrete I/O Interface	
Trigger input	Connects to PLC output. Starts auto-dialing when TRUE.
Voltage range	9 to 30 VDC (6.5 mA at 24 VDC)
Max OFF voltage	5 VDC
Online output	Output is ON as long as a connection exists (carrier detect).
Output type	Sourcing, switches power supply 100 mA max output current

Mounting dimensions

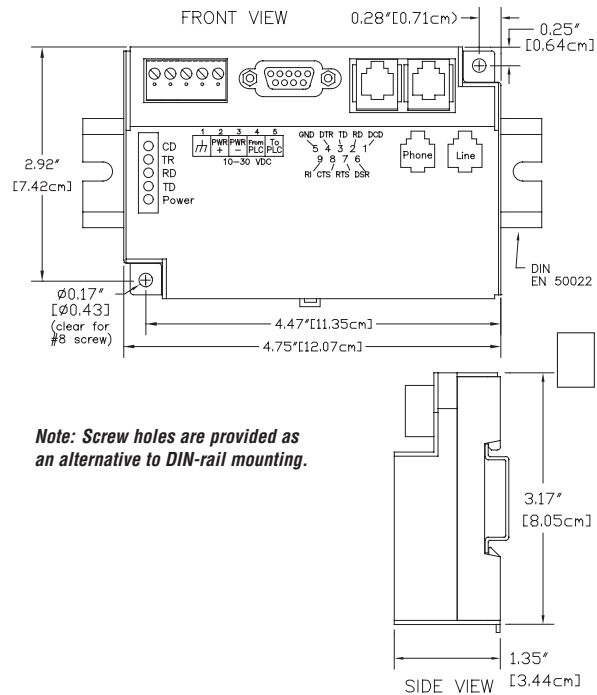

Complete documentation

Download the [setup wizard](#) and [user manual](#) from _____.

AutomationDirect.com Modem Wizard - Modem Parameters

Select the proper modem parameters for your application.

Basic Modem Parameters:

Phone Number 1:

☒ Enable Auto-Answer on Rings

☒ Ignore DTR (assume DN)

☐ Ignore Carrier Detect (force DN)

Advanced Modem Parameters:

☐ Disable Command Echo

☐ Disable Error Correction

Flow Control:

☒ Disable Data Compression

☐ Save Power After Seconds

Modem to Modem Speed:

☒ Auto-detect Speed to:

☐ Fixed Speed:

User-Defined "AT" String:

Easy set-up with modem wizard software