

# SJ300 ACCESSORIES — FILTERS


## Pulse width modulation filter

### Application

The Pulse Width Modulation filter card smooths the pulse-width modulated signal from the FM output terminal on the drive to a 0-10VDC signal. This signal can then be used as a source to PLC analog input modules or metering devices. The FA-4PWM has four channels for use with multiple inverters.



FA-4PWM shown connected between an SJ300 drive and channel 1 of an F2-04AD-2 analog input module.

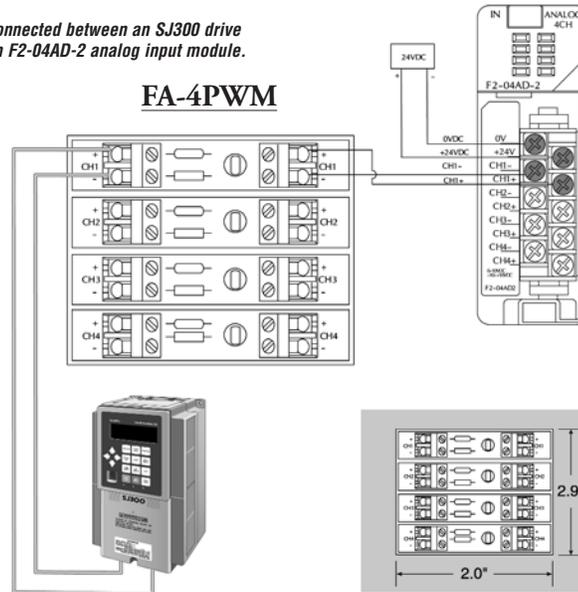

Pulse Width Modulation Filter	
Part Number	Price
FA-4PWM	<-->




## RF capacitive filters

### Application


The RF filters can be used on the input side of the inverter to reduce RF noise.

Specifications			
Part #	Input Voltage	Ambient Temperature	Price
CFI-L	230V, 50/60 Hz	-40 to 85°C (-99 to 185°F)	<-->
CFI-H	460V, 50/60Hz		<-->

## CFI-L dimensions

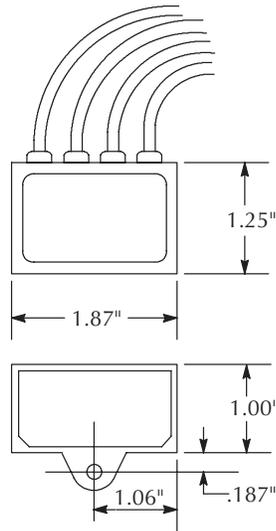

## CFI-H dimensions

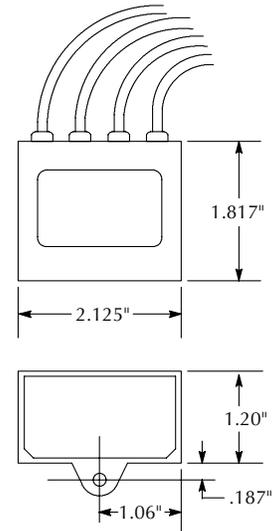


# SJ300 ACCESSORIES — EMI FILTERS

## EMI filters

EMI filters reduce electromagnetic interference or noise on the input side of the inverter, EMI filters are needed for CE compliance.

### NF-CEH7 to NF-CEH40 dimensions

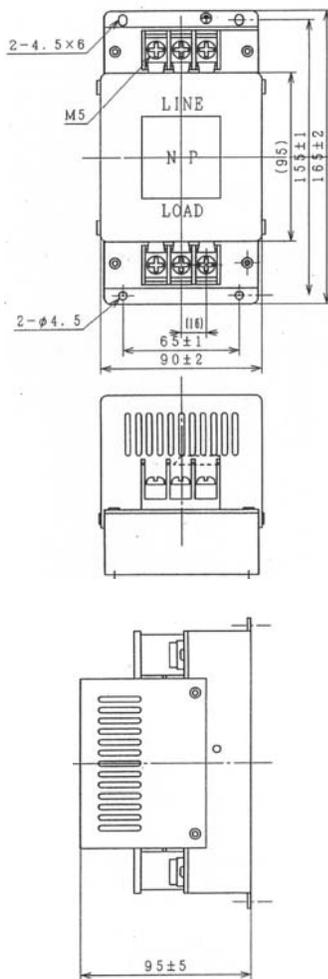


Filter dimensions are in mm.  
(1 inch = 25.4 mm)  
Example: 40 mm to inches-40/25.4 = 1.57 in.


SJ300 Model EMI Filter				
200V Class	400V Class	EMI Filter	EMI Filter Rating	Price
004LFU	007HFU	NF-CEH7	1/2 - 1Hp 230VAC and 1 - 3Hp 480VAC	<--->
007LFU	015HFU			
	022HFU			
015LFU	040HFU	NF-CEH10	NF-CEH10 2Hp 230VAC and 5Hp 480VAC	<--->
022LFU	055HFU	NF-CEH20	3 5Hp 230VAC AND 7.5 - 10Hp 480VAC	<--->
037LFU	075HFU			
055LFU	110HFU	NF-CEH30	7.5Hp 230VAC AND 15Hp 480VAC	<--->
075LFU	150HFU	NF-CEH40	10Hp 230VAC AND 20Hp 480VAC	<--->
	185HFU	NF-CEH50	25Hp 480VAC	<--->
110LFU	220HFU	NF-CEH60	15Hp 230VAC AND 30Hp 480VAC	<--->
150LFU	n/a	NF-CEH80	20Hp 230VAC	<--->
185LFU	n/a	NF-CEH100	25Hp 230VAC	<--->
220LFU	n/a	NF-CEH150	30 Hp 230VAC	<--->

NF-CEHxx Dimensions in mm														
Part #	A	B	C	D	E	F	G	H	J	K	L	M	N	P
NF-CEH50	217	200	185	170	120	90	-	115	85	20	R2.75, L7	Ph5.5	M6	M4
NF-CEH60	217	200	185	170	120	90	-	115	85	20	R2.75, L7	Ph5.5	M6	M4
NF-CEH80	217	200	185	170	120	90	-	115	85	20	R2.75, L7	Ph5.5	M6	M4
NF-CEH100	254	230	215	200	150	120	-	115	85	30	R3.25, L8	Ph5.5	M8	M6
NF-CEH150	314	300	280	260	200	170	-	130	90	35	R3.25, L8	Ph5.5	M8	M6

### NF-CEH40 to NF-CEH150 dimensions

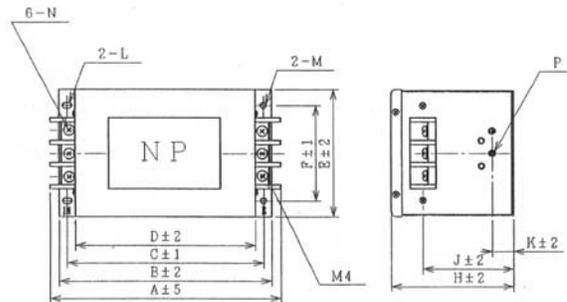

### NF-CEH200 to NF-CEH300 dimensions

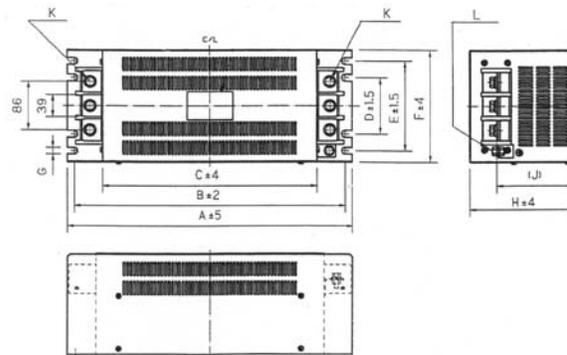

# SJ300 ACCESSORIES — OPTION CARDS


## Encoder feedback board

The SJ-FB encoder feedback board improves the SJ300's speed regulation and torque response. The SJ-FB connects to a two-channel incremental encoder and detects the rotational speed of the motor to prevent speed fluctuations.

The SJ-FB can also be used for master/slave control, electronic line shaft with ratio control, and shaft position control.

Specifications		Price
<b>Part Number</b>	<b>SJ-FB</b>	<--->
<b>Speed control</b>	<b>Encoder Feed-back</b>	Standard encoder pulse number 1024 pulses per revolution Max. input pulse 100k pulses per second
	<b>Speed Control System</b>	Proportional-integral (PI) / Proportional (P) control
<b>Electronic Gears Control</b>	<b>Pulse Selection for Electronic Gears</b>	Three kinds of pulse train input selectable by main body setting
		Mode 0: 90° phase difference pulse
		Mode 1: forward/reverse signal pulse
	<b>Electronic Gears</b>	Mode 2: forward pulse/reverse pulse Max. input pulse 100k pulses Pulse ratio A/B (A, B: 1~9999 selectable) Ratio setting range: $1/50 (.02) \leq A/B \leq 20$
<b>Protection Function</b>		Encoder cable line break protection Over speed protection (over speed error detection level (P026)) Positioning error

## Encoder feedback board terminal assignment

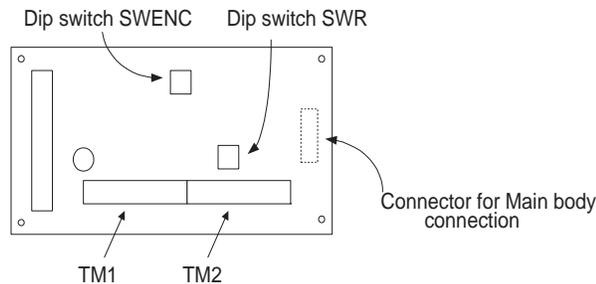


TM1 terminal assignment

EP5	EG5	EAP	EAN	EBP	EBN	EZP	EZN
-----	-----	-----	-----	-----	-----	-----	-----

TM2 terminal assignment

SAP	SAN	SBP	SBN	AP	AN	BP	BN
-----	-----	-----	-----	----	----	----	----

## Encoder feedback connections

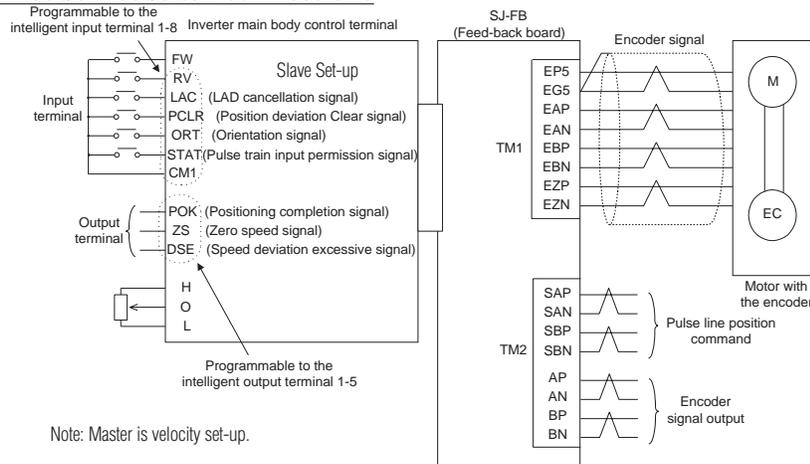

Note: Master is velocity set-up.

Terminal Specifications		
Symbol	Description	Electrical Specifications
<b>Input Terminals</b>		
<b>SAP SAN SBP SBN</b>	Pulse line position command input	DC5V receiver input (based on RS-422 standard)
<b>EAP EAN EBP EBN EZP EZN</b>	Encoder signal input	Photo coupler input (Correspondence to the DC5V line driver type rotary encoder)
<b>STAT</b>	Pulse train position command input permission signal (Note 1)	Photo coupler input (Refer to a main body intelligent input terminal.)
<b>LAC</b>	LAD cancel signal: (Note 1)	
<b>PCLR</b>	Position deviation clear signal: (Note 1)	
<b>Output Terminals</b>		
<b>AP AN BP BN</b>	Encoder signal output	DC5V line driver output (based on RS-422 standard)
<b>EP5 EG5</b>	Power supply for encoder	+5VDC, 150mA max
<b>POK</b>	Positioning completion signal (Note 2)	Open collector outputs (refer to a main body intelligent input terminal)
<b>DSE</b>	Speed deviation excessive signal (Note 2)	
<b>ZS</b>	Zero speed signal (Note 2)	


Note 1: Valid when LAC is assigned to an intelligent input terminal of the main body (SJ300).

Note 2: Valid when POK is assigned to an intelligent output terminal of the main body (SJ300).



# SJ300 CONFIGURATION, CONTROL AND MONITORING

The SJ300 Series drives can be configured multiple ways. The drive can be configured using the removable keypad that comes with the drive (OPE-SRE), the remote digital keypad with serial communications (SC-OPE3I), or the optional Windows-based programming software DOP-PRO, available for free download at [www.drivemanager.com](http://www.drivemanager.com). The DOP-PRO-CBL programming cable is required to download configurations to the drive.

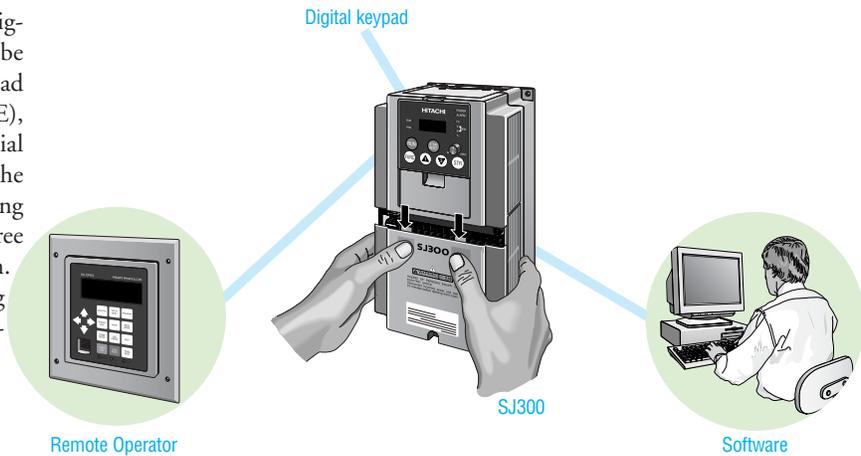

## Digital keypad

### OPE-SRE (SJ300 Series only)

The OPE-SRE comes standard on every SJ300 Series drive. This keypad has a single line, 4-character LED display. The OPE-SRE can be used to program the drive's parameters as well as monitor specific drive functions.

The OPE-SRE can be mounted on the SJ300 drive or mounted remotely. Use a standard UTP Cat5e Ethernet cable (3m maximum length) for remote mounting. Replacement keypads for the SJ300 are available and come with an extra filler plate.

### OPE-SRE



Digital Keypad		
Part Number	Description	Price
OPE-SRE	Digital remote operator	<-->

## Programming Cable

The DOP-PRO-CBL cable is used to interface a PC to an SJ300 drive using DOP-PRO configuration software. It has a built-in RS232/422 converter and an RJ45 connector.

### DOP-PRO-CBL



Programming Cable		
Part Number	Description	Price
DOP-PRO-CBL	Programming cable for DOP-PRO software	<-->