

EchoPod® & EchoSonic® II Ultrasonic Liquid Level Sensors



The EchoPod and EchoSonic II are innovative ultrasonic liquid level sensor families that replace float, conductance and pressure sensors that fail due to contact with dirty, sticky and scaling media in small, medium and large capacity tanks. Applied in chemical, water and wastewater applications, these general purpose non-contact sensors are available with single and multi-function capabilities including continuous level measurement, switching and control.

For input to a PLC or other controller, measurement outputs include current, voltage and frequency. Models with four relays can be configured for level alarms and/or stand-alone level control such as automatic fill or empty functions using the embedded level controller. PC configuration is simple with WebCal™ software.



EchoPod & EchoSonic II Ultrasonic Liquid Level Sensors General Specifications										
Model	DL34-00	DL24-00	DL14-00	DS14-00	DX10-00	DL10-00	LU27-00	LU23-00	LU28-00	LU29-00
Price										
Type	EchoPod					EchoSonic II				
Class	General Purpose (non-hazardous)									
Media*	Liquids									
Range	8in to 18 ft (20cm to 5.5 m)	4in to 9.8 ft (10cm to 3m)	2in to 4.1 ft (5cm to 1.25 m)			4in to 9.8 ft (10cm to 3m)	8in to 18 ft (20cm to 5.5 m)	8in to 26.2 ft (20cm to 8m)	8in to 32.8 ft (20cm to 10m)	
Output Types	4-20 mA and (4) SPST relays			(4) SPST relays	0-5V, 0-10V, 976-2000 Hz	4-20 mA				
Install	Vertical, top of tank									
Mounting	2in MNPT	1in MNPT				2in MNPT				
Relays	(4) SPST				No Relay					
Configuration	WebCal Software (free download) and LI99-2001 Fob USB Adapter (purchased separately)									
Ambient Temperature	-31° to 140°F (-35° to 60°C)									
Process Temperature	20° to 140°F (-7° to 60°C)					-4° to 140°F (-20° to 60°C)				
Pressure	30 PSI (2 bar) max.									

* Any factor that negatively affect sound's ability to travel such as, vapor, condensation, foam, turbulence, vacuum, etc., will have a negative effect on the ultrasonic sensor signal and should be avoided. For condensing environments the Flowline UG/US series of Reflective Ultrasonic Level Sensors are recommended.



WebCal



LI99-2001

WebCal Software

WebCal PC software is a utility program that allows users to easily configure their EchoSonic II and EchoPod level transmitters, switches, and controllers. Download your free copy of WebCal

2001). Develop your configuration using pre-programmed function menus as the tank graphic and set point fields automatically change to match your configuration. Then, input your level set point values and click the Write to Unit button. Your configuration will be downloaded into the sensor and verified in less than a second. Last, click the Wiring Diagram button to open a wiring schematic of your configuration in PDF format. Print the document, disconnect the sensor and wire it per the schematic. As new software or firmware becomes available, they can be downloaded and updated through WebCal.



LI40-1001

PodView®

The PodView digital level indicator is a low cost general purpose level indicator that displays engineering units for level or volume and shares power with an EchoPod ultrasonic sensor, including loop powered devices. The LI40 can be field mounted for local indication as well as be used to make simple setting changes to the sensor. The display can be easily attached to any EchoPod sensor that has been configured with WebCal 6.0 / firmware 50.0 or higher. PodView displays sensor output and can reconfigure sensor setpoints on the fly. PodView shares power with the sensor and does not require any additional outside power supply.



Click on the thumbnail or go to <https://VID-LE-0003> for a short video introduction to Flowline Ultrasonic Level Switches.



Click on the thumbnail or go to <https://VID-LE-0002> for a short video introduction to Flowline EchoTouch, EchoSpan, EchoSwitch and PodView product lines.

EchoSonic II LU Series Ultrasonic Liquid Level Transmitters



Overview

The EchoSonic II LU Series ultrasonic liquid level transmitters provide continuous level measurement up to 9.8 ft (3m), 18ft (5.5 m), 26.2 ft (8m) or 32.8 ft (10m), with a 4-20mA signal output, and are configured via WebCal software. This non-contact liquid level sensor is ideally suited for corrosive, ultrapure, sticky or dirty liquids, and is broadly selected for bulk storage, dry tank, lift station and process tank level applications.



Part No. LU27



Part No. LU23/28/29

Features

- Continuous level measurement up to 9.8 ft (3m), 18 ft (5.5m), 26.2 ft (8m) or 32.8 ft (10m)
- DSP auto adaptive filters enable plug and play operation optimizing signal output filtering and obstacle recognition
- Configuration is fast and easy via WebCal software and USB adapter
- Narrow 2 inch or 3 inch beam width for applications with limited measurement space
- Short 4 inch or 8 inch dead band maximizes the measurable filling capacity of the tank
- PVDF transducer and NEMA Type 6P polycarbonate enclosure for corrosive liquids, UV stable for outdoor use
- Automatic temperature compensation for accurate measurement
- Made in the USA
- **Agency Approvals**
- cFMus



LU20 Series Technical Specifications				
Model	LU27-00	LU23-00	LU28-00	LU29-00
Price				
Range	4in to 9.8 ft (10cm to 3m)	8in to 18.0 ft (20cm to 5.5 m)	8in to 26.2 ft (20cm to 8m)	8in to 32.8 ft (20cm to 10m)
Accuracy	± 0.2% of range			
Resolution	0.019 in (0.5 mm)	0.039 in (1mm)	0.079 in (2mm)	
Sensing Dead Band*	4in (10.2 cm)	8in (20.3 cm)		
Beam Width	2in (5.1 cm)	3in (7.6 cm)		
Configuration	WebCal Free Software and LI99-2001 Fob USB Adapter			
Memory	Non-volatile			
Loop Supply Voltage	14 - 28 VDC1			
Consumption	0.5 W			
Loop Resist	500Ω @ 24 VDC			
Signal Output	4-20 mA, two-wire			
Signal Invert	4-20 mA or 20-4 mA			
Signal Fail-Safe	4mA, 20mA, 21mA, 22mA or hold last			
Process Temperature	-4° to 140°F (-20° to 60°C)			
Temp. Compensation	Automatic			
Ambient Temperature	-31° to 140°F (-35° to 60°C)			
Pressure	MWP = 30 PSI (2 bar)			
Enclosure Rating	NEMA Type 6P, IP67, encapsulated, corrosion resistant & submersible, UV stable			
Enclosure Material	Polycarbonate			
Transducer Material	Polyvinylidene Fluoride			
Cable Jacket Material	Polyurethane			
Cable Type	4-conductor, shielded			
Cable Length	10ft (3m)			
Process Mount	1in MNPT (See accessories for installation fittings)	2in MNPT (See accessories for installation fittings)		
Mount Gasket	Viton (included, replacement part number 200128)	Viton (included, replacement part number 200129)		
Weight (lbs)	1.4	1.8	1.8	1.8
Classification	General purpose			
Compliance	CE, RoHS			
Agency Approvals	cFMus			

* Dead band is the minimum distance the sensor must be mounted above the max liquid level.



1 If supply exceeds 28 VDC damage to the transmitter may occur.

EchoSonic II LU Series Ultrasonic Liquid Level Transmitters

Dimensions

inches [mm]

LU20 Series

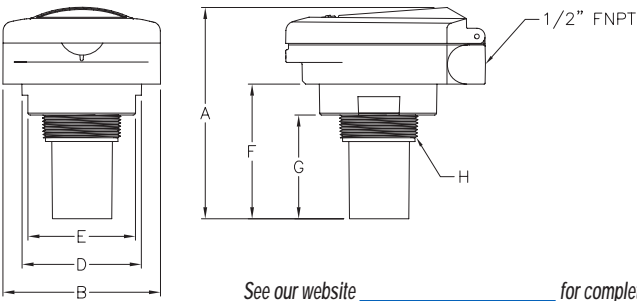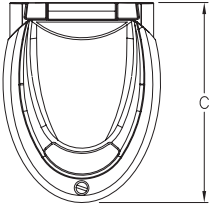


See our website [www.flowline.com](#) for complete Engineering drawings.

Dimensions	A	B	C	D	E	F	G	H
LU27	2.71 [68.9]	4.00 [101.7]	4.10 [104.1]	3.10 [78.8]	2.75 [69.7]	1.70 [43.1]	1.10 [28.0]	1" MNPT
LU23, 28, & 29	4.31 [109.6]	4.00 [101.7]	4.10 [104.1]	3.10 [78.8]	2.75 [69.7]	3.30 [83.8]	2.70 [68.7]	2" MNPT


When installing the 1" NPT level sensors care should be used to mechanically isolate the sensor housing from the tank. This can easily be done by using any of the Flowline mounting accessories which are designed to provide the isolation needed.

Wiring

LU27

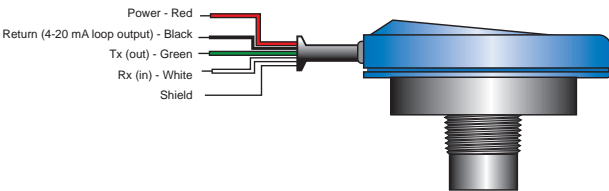


LU23, LU28, LU29

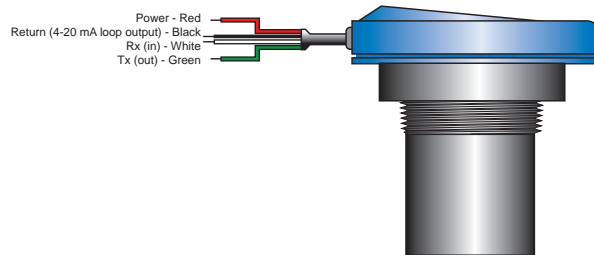


Configuration

The settings for the the LU series are configured with free WebCal software (downloadable from AutomationDirect Web site) and an LI99-2001 Fob USB adapter (purchased separately).

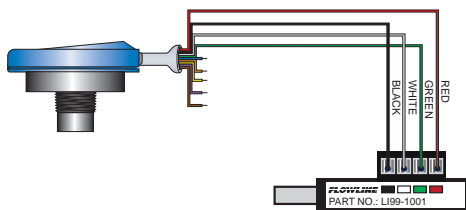

Maximum Loop Resistance in Ω

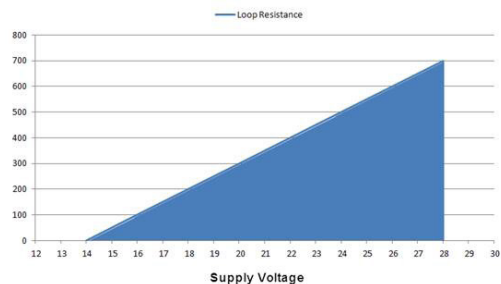

See the end of the Ultrasonic Level Sensor Section for further details and Accessories

WebCal Ultrasonic Level Sensor Software and USB Fob Adapter

Overview



WebCal PC software is a utility program that allows users to easily configure their EchoPod, EchoTouch and EchoSonic II level transmitters, switches, and controllers. Download your free copy

sensor through the Fob USB adapter (LI99-2001). Develop your configuration using pre-programmed function menus as the tank graphic and set point fields automatically change to match your configuration. Then, input your level set point values and click the Write to Unit button. Your configuration will be downloaded into the sensor and verified in less than a second. Last, click the Wiring Diagram button to open a wiring schematic of your configuration in PDF format. Print the document, disconnect the sensor and wire it per the schematic. It's that simple.


Configuration files can be named, saved, emailed, printed, opened and used again under revision control. The advanced feature page enables you to change the measurement signal, output filtering and invert relay states from N.O. to N.C. As new software or firmware becomes available, they can be downloaded and updated through WebCal.

Features


- 169 configurations with pull-down menu selections
- Graphical interface lets you visualize your configuration
- Applicable level set point fields appear automatically
- Installs and tests configuration in less than a second
- Available PDF wiring diagram for each configuration
- Technical help menu with FAQs, tips and glossary
- Rapidly program sensors to the same configuration
- Save configuration files for future use or reference
- Print wiring diagrams and configuration text files
- Email configuration files to other remote users
- Made in the USA
- Please check for the most recent system requirements.

WebCal Ultrasonic Level Sensor Software and USB Adapter					
Part No.	Item Photo	Description	Quantity	Weight (lbs)	Price
LI99-2001		Flowline Fob USB adapter, required for use with WebCal software to configure Flowline EchoPod, EchoTouch and EchoSonic II ultrasonic level sensors.	1	0.1	
WEBCAL		Configuration software CD for Flowline EchoPod, EchoTouch and EchoSonic II ultrasonic level sensors (also available as a free download from the AutomationDirect Web site). Requires an LI99-2001 Fob USB adapter (purchased separately).	1	0.1	

EchoPod Configuration

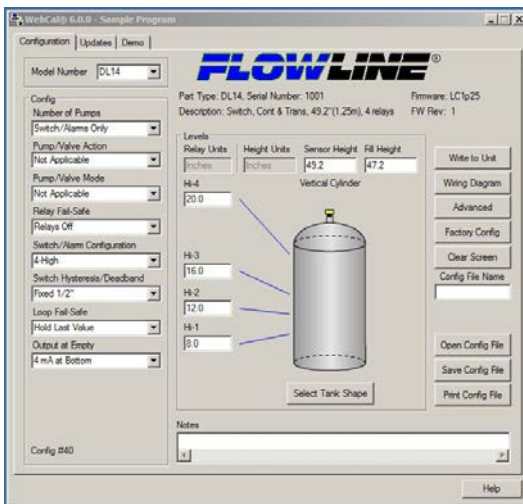

EchoSonic II Configuration

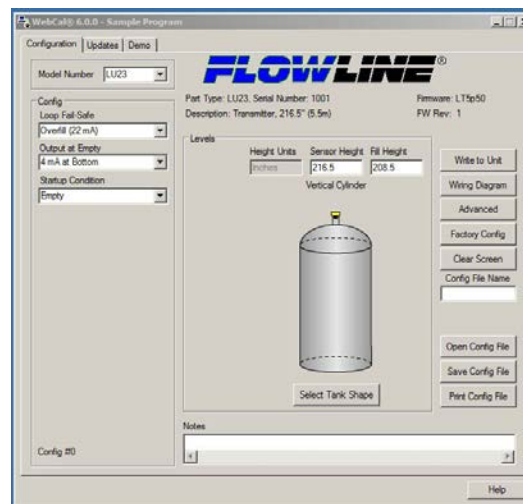

Click on the thumbnail or go to <https://VID-LE-0004> for Part 1 of our How To video on the use of the Flowline Ultrasonic Level Sensors



Click on the thumbnail or go to <https://VID-LE-0005> for Part 2 of our How To video on the use of the Flowline Ultrasonic Level Sensors